

Instruction Sheet

Kit Number: 71516200 & 71516300

HAND GRIP KIT



WARNING: FAILURE TO FOLLOW INSTRUCTIONS could result in personal injury and/or damage to unit.

Read, understand, and follow all safety practices in Operator's Manual before beginning.

Package Contents

Check the contents of your kit for the parts listed below
Also see Figure 1.

Item	Description	Qty	AriensCo P/N
1	Gravelly Handlebar Grip (71516200)	2	05278900
	Ariens Handlebar Grip (71516300)	2	09462300

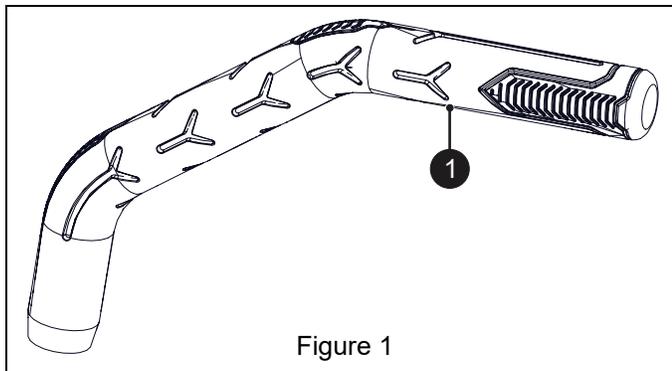


Figure 1

REMOVAL

1. Stop unit and remove key.
2. Wait for all moving parts to stop and for hot parts to cool.
3. Engage parking brake.

4. Remove grip from handlebar. See Figure 2.
5. Remove all debris and residue from handlebar tube.

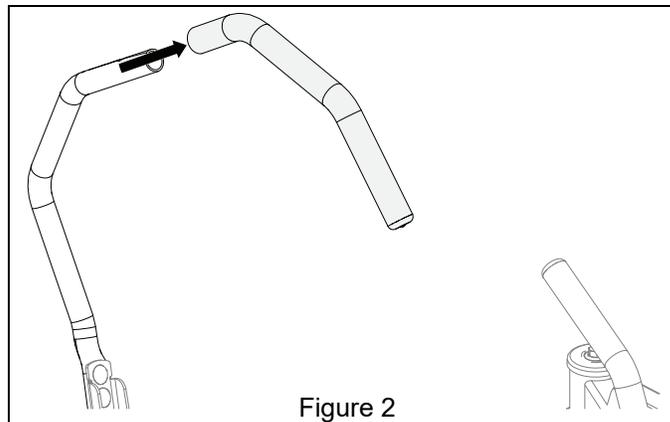


Figure 2

INSTALLATION

1. Apply temporary assembly lubricant, such as P80[®] Emulsion, or equivalent (not included) to the handlebar tube.
2. Rotate and slide handlebar grip (item 1) onto the handlebar tube until fully seated.
3. Position grip so that it is not twisted and flat ribbed portion faces operator seat. See Figure 3.

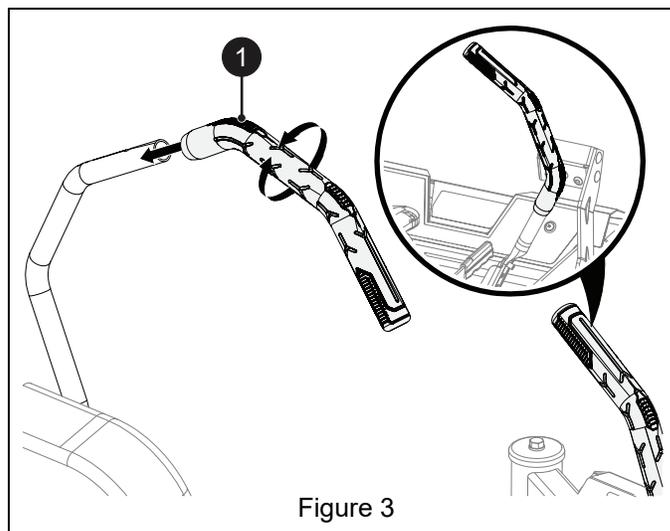


Figure 3

4. Repeat removal and installation steps for other handlebar.
5. Allow assembly lubricant to dry before operation.